

TABLE OF CONTENTS

GB

DESCRIPTION OF THE DRYER **PAGE 44**

FILTER **PAGE 44**

BEFORE USING THE DRYER **PAGE 45**

PRECAUTIONS **PAGE 45**

PREPARING THE LAUNDRY **PAGE 46**

SELECTING DRYING TIME OR PROGRAMME AND OPTIONS **PAGE 47**

STARTING AND COMPLETING THE PROGRAMME **PAGE 48**

INSTALLATION **PAGE 49**

ELECTRICAL CONNECTION **PAGE 49**

VENT CONNECTION **PAGE 51**

DOOR REVERSIBILITY **PAGE 51**

MAINTENANCE **PAGE 52**


TROUBLE SHOOTING GUIDE **PAGE 53**

AFTER-SALES SERVICE **PAGE 53**

To get full satisfaction from your dryer, please read carefully your instruction manual.

DESCRIPTION OF THE DRYER

1. **Work-top**
2. **Contact pin**
3. **Door (Door opening can be reversed).**
See "Door reversibility" section.
To open the door: pull the handle out.
To close the door: push the door gently until it closes.
4. **Lint filter**
5. **Child safety-lock**
- 5a. **For dryers with clear door**
Using a coin or a screwdriver turn the plastic screw counterclockwise until it snaps in.
The door cannot be locked.
- 5b. **For dryers with non-clear door**
Using a coin or a screwdriver turn the plastic screw clockwise by 90°.
Slot vertical: the door cannot be closed.
Slot horizontal: the door can be closed.
6. **Inside lamp (if available)**
Only comes on when the door is open (the programme has to be selected), or the option 'light' is selected.
Light off: the programme selector knob is set to "0".
After starting the inside lamp will remain lit for 30 seconds.

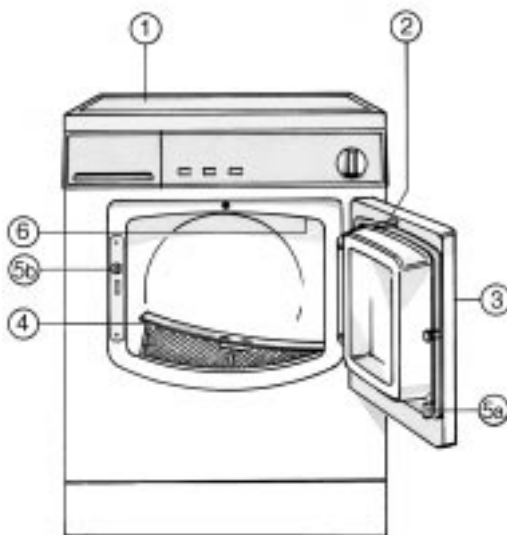

FILTER

Clean the lint filter at the end of each drying cycle.

1. Pull the filter upwards.
2. Open the filter.
3. Brush lint using a soft brush or your fingertips.
4. Close the filter and push it back well into place.

Filter Indicator light

It warns that the filter is dirty and needs to be cleaned.

If the laundry is insufficiently dry, check that the filter is not clogged.

BEFORE USING THE DRYER

- After unpacking please make sure that the dryer is undamaged. In case of doubt do not use the dryer but call a qualified technician or your retailer.
- Packaging material (plastic, etc.) must be kept out of the reach of children as it constitutes a potential risk.
- This dryer was designed for domestic use and must be used exclusively for drying laundry.

Environmental hints

1. Packaging material

The packaging material can be 100% recycled, as confirmed by the recycling symbol (♻).

2. Dryer

The dryer is built from recyclable materials. If you decide to scrap the dryer act responsibly and observe local waste disposal by laws. Cut off the power cord so that the dryer cannot be connected to the mains.



PRECAUTIONS

Child safety

- After use, set the programme selector to position "0". This prevents children from switching on the dryer accidentally.
- **For domestic use only.**

This dryer conforms to EEC directive 93/68.

PREPARING THE LAUNDRY

Laundry preparation

Check that all fastenings are closed and that pockets are empty. Turn the articles inside out. Place laundry loosely in the drum to make sure that they don't get tangled.

Max. drying weigh

- Cottons 5,0 kg
- Cottons with Rapid option 3,5 kg (electronic dryer)
- Synthetics 2,5 kg
- Delicates 1,5 kg (electronic dryer)

The given weights correspond to a standard laundry load.

Sort laundry as follows

A) By care symbols

On the collar or inside seam:



Suitable for tumble drying



Tumble drying at low temperature only



Do not tumble dry

B) By amount and thickness

Whenever the load is bigger than the dryer capacity, separate laundry according to thickness (e.g. towels from thin underwear).

C) By type of fabrics

Cottons/linen: Towels, cotton jersey, bed and table linen made of cotton or linen.

Synthetics: Blouses, shirts, overalls, etc. made of polyester or polyamide, as well as for cotton/synthetic mixes.

Delicate: Sensitive fabrics for example viscose.

D) By drying level

- Sort into: iron dry, cupboard dry, etc.
- For delicate articles press the option button "Gentle" (not possible with the delicate programme).

Do not tumble dry:

Woolens, silk, delicate fabrics, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Attention: Do not dry articles which have been treated with a dry cleaning fluid or rubber articles (danger of fire or explosion). Do not dry laundry dirty with vegetable oils.



SELECTING DRYING TIME OR PROGRAMME AND OPTIONS

Electronic dryer

1. Select the programme and the options as indicated in the table (see Programme Table).

2. Options (If available)

To select an option, press the corresponding button before pressing the **Start** button. The indicator above the button lights up to confirm that a selection has been made. An alarm sounds to indicate that an incorrect selection has been made (incompatible options). Press the button again to cancel the option.



Delayed Start

Delays dryer starting. Every time the push button is pressed the start is delayed by 1 hour. Can be set to a max. of 9 hours. When the required delay time has been set press the **Start** button. If the dot in the display flashes the Delayed Start is running. The count down is displayed. The delay can be changed or cancelled by selecting "0" with the programme selector knob. Opening the door stops the count-down. Close the door and press the **Start** button again to continue the count-down.

Anti-crease option can be selected during the count-down. The drum will turn from time to time during the count-down to redistribute the laundry.



Gentle

Reduces the drying intensity. Suitable for delicate articles. It is automatically included in the delicate programme, therefore selection is not possible.



Plus

Lengthens the drying time for heavy laundry.



Rapid (Cottons only) Max. 3,5 kg.

Shortens the drying time (e.g. cloths or other laundry of equal size). Do not use the option for large items (e.g. sheets or similar).



Buzzer

Pressing the button initiates a buzzer sound to signal at regular intervals, at the end of the drying cycle.



Anti-crease protection

If you have pressed this button and do not take the laundry out of the drum at the end of the drying cycle, an anti-crease cycle operates: the drum turns at regular intervals for 12 hours preventing the laundry from becoming wrinkled. If the option is selected with "Delayed Start" the cycle operates both before and after the drying cycle.

N.B. If you do not press this button the anti-crease cycle is reduced to 70 minutes. If the buzzer is selected it will give an acoustic signal at regular intervals to remind to take out the laundry.



Light

On pressing this button an inside lamp comes on and lights the drum for 30 seconds with the door closed.



Programme Sequence Indication

When the drying cycle has been started the indicator lights show the "cycle status".

3. Additional Programmes



Airing

The laundry will be aired during 30 minutes without heating.



Time programme (20 to 60 minutes)

To gently finish dry or dry single items. Suitable for all fabrics.

SELECTING DRYING TIME OR PROGRAMME AND OPTIONS

Time-steered dryer

1. Select the drying time and the options according to the table (see Programme Table).
2. **Options (if available)**
To select an option, press the corresponding button. Press the button again to cancel the option.

✱ **Gentle**

Reduces the drying intensity. Suitable for delicate articles.



Buzzer


Pressing the button initiates a buzzer sound to signal at regular intervals, at the end of the drying cycle.

3. **Additional Programme**



Airing

The laundry will be aired during 20 minutes without heating.

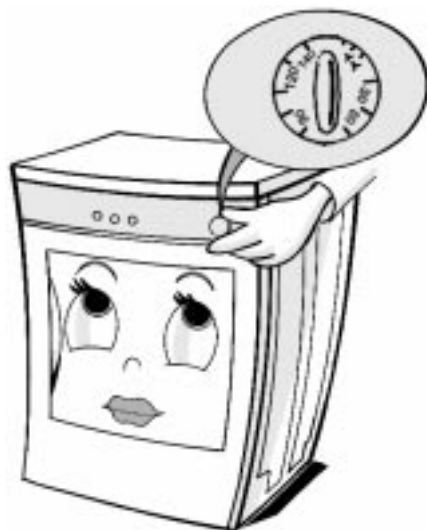

STARTING AND COMPLETING THE PROGRAMME

1. Having selected the desired drying time or programme and options, press the **Start** button.
2. If selected a buzzer sounds to signal the end of the drying cycle. It will sound at regular intervals for some time.
3. If you do not unload the laundry at the end of the drying cycle, an automatic anti-crease cycle (✱) will operate for maximum 20 minutes (Time-steered dryer) or 70 minutes (Electronic dryer): the drum rotates at regular intervals preventing the laundry from creasing.
4. On completion of the programme, set the programme selector knob to position "0". The "Machine On" light goes off.
5. **Clean the lint filter at the end of each drying cycle.**
6. If you change the programme (electronic dryer) during the drying cycle the dryer stops. To operate the new programme press the **Start** button again.

Interruption of the drying cycle

To interrupt the dryer during the drying cycle, set the programme selector knob to position (Airing) and press the **Start** button again for the Electronic dryer.

Wait at least 5 minutes before opening the door to allow the dryer to cool down.

For your safety the programme stops automatically if you open the door. To restart close the door and press the **Start** button again.

INSTALLATION

- Install your dryer in a room which is not subject to extreme conditions.
- Remove the protective foil from the control panel.
- Level the dryer adjusting the four feet.
- Take care not to trap the mains cable between the dryer and the wall.



Stacking kit

Your dryer can be stacked on top of your washing machine, using the stacking kit AMH 542, which is available from your dealer.

Building under

Your dryer can be built under, using the built under kit UBS10 which is available from your dealer.


When building under your dryer, ensure that there is an external air device to allow the warm air to vent out.

Minimum housing dimensions:

Width: 600mm

Height: 850mm

Depth: 600mm

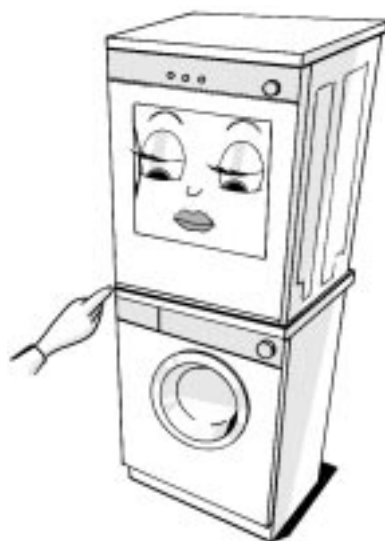


ELECTRICAL CONNECTION

- The electrical connection has to be carried out in compliance with local regulations.
- Information on the voltage is given on the rating plate on the back of the dryer.
- The earthing of this dryer is compulsory by law.
- Do not use extension cords or multiple adapters.
- Before any maintenance on the dryer, disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact a qualified service technician.
- In case of replacement of mains cable contact a qualified service technician.



ELECTRICAL CONNECTION

For Great Britain only

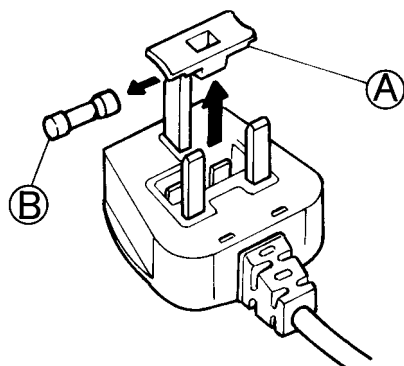

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

Connection to a rewirable plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

A suitable alternative plug should then be fitted to the cable.


The wires in the mains lead are coloured in accordance with the following code:

BLUE - "NEUTRAL" ("N")

BROWN - "LIVE" ("L")

GREEN AND YELLOW - "EARTH" ("E")

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol 4 or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured red.

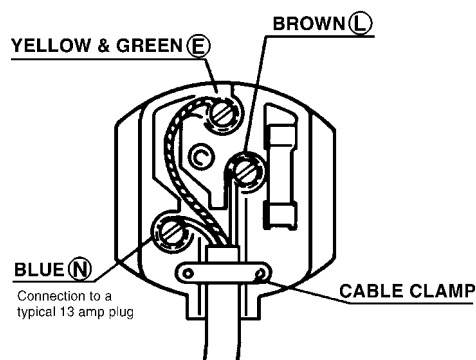

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.


VENT CONNECTION

Vent outlets are on the left, right or on the back.

When delivered from the factory the vent hose with an adaptor is in the drum. It can be mounted on the left, right or the back of the dryer.

To mount vent hose proceed as follows:

- Remove the round cover using a screwdriver, pulling gently up.
- Clip the adaptor to the hose (diagram A) and position it on the outlet desired (diagram B).
- If dismantled remount the cover on the remaining open outlet.

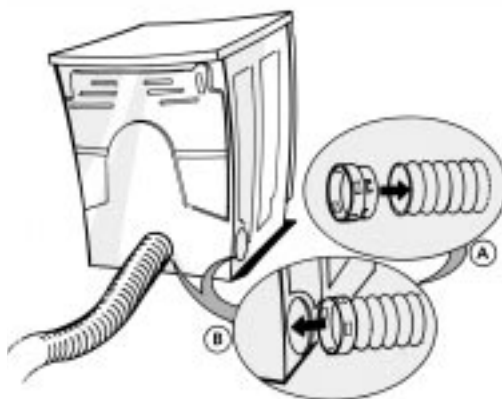

Ventilation to the outside

- Position the vent hose to the outside without sharp bends (internal diameter 10 cm, maximum length with 2 elbows: 3m).
- When stacking on a washing machine ensure that the hose is horizontal or vertical. The vent hose should not sag down.
- Do not mount any filter on the end of the hose. The filter could block, reducing the performance of your dryer.
- Do not connect the vent hose to the heating system.
- Use only outlets insulated from the damp.

Without vent hose


- Use the dryer in large well ventilated room.
- Keep the room free of dust.
- The minimum distance from the air opening to the wall must be at least 10 cm.

When vent hose is not supplied it is recommended to use the kit AMH 577 which is available from your dealer.

DOOR REVERSIBILITY

To change the direction of opening of the clear door

1. Unplug the dryer.
2. Open the door.
3. Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out.
4. Unscrew the 2 screws at the door hinge and remove the door.
5. Unscrew the 2 screws above and below the door lock system and remove the plate.
6. To remove the door lock:
 - Press the hook at the upper part down with a screwdriver, pull it forward and take the lock system out.
7. To change the door opening:
 - Turn the door.
 - Re-fit the door with the 2 screws at the preferred position.
 - Hang the door lock system at the opposite side of the door and latch it.
 - Fix the plate with the 2 screws above and below the door lock system.
 - Take care not to reverse the sense of the plate. The door lock should be free to move.
8. Replace the contact pin in the top of the door.

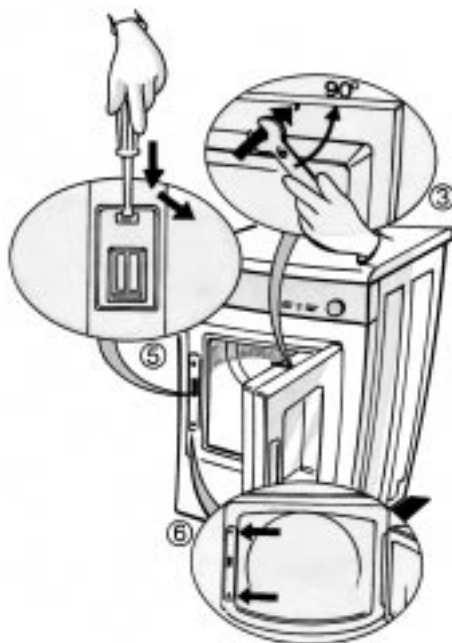

DOOR REVERSIBILITY

To change the direction of opening of the non-clear door

1. Unplug the dryer.
2. Open the door.
3. Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out.
4. Unscrew the 2 screws at the door hinge and remove the door.
5. To remove the door lock:
 - Unscrew the two screws above and below the door lock system and slide it upwards (1,5 cm) holding it from the bottom. Remove it.
6. To change the door opening:
 - Turn the door.
 - Re-fit the door with the 2 screws at the preferred position.
 - Insert the door lock system at the opposite side of the door and move it (1,5 cm) down.
 - Fix the 2 screws above and below the door lock system.
 - Take care not to reverse the sense of the door lock system. The child safety must be above the locking mechanism.
7. Replace the contact pin in the top of the door.



MAINTENANCE

1. Wipe the cabinet with a mild household detergent. Avoid using abrasive cleaners.
2. Clean the lint filter at the end of each drying cycle.
3. If the lint filter mesh is clogged, clean it with water and a soft brush.
4. Wipe away fluff at the door seal and the inside of the door using a damp cloth.



TROUBLE SHOOTING GUIDE

Should your dryer operate incorrectly, check the following points before calling for a qualified service technician.

Drying is too long / laundry is not dry enough:

- Have you selected the correct drying time or programme ?
- Was the inserted laundry too humid (Washing machine spin speed less than 800rpm)?
- Is the lint filter dirty (filter indicator light on) ?

After an interruption in the mains supply you must restart the dryer (Electronic dryer).

The dryer does not operate:

- Is the plug properly connected to the mains supply?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the drying time or programme been selected?
- Has the **Start** button been pressed?

Lint filter light on:

- Is the lint filter clean?
- Is the vent hose blocked?

Replacing inside light bulb (if available):

- If the inside lamp does not work, the bulb may perhaps be faulty.
- **Unplug the dryer !**
- Open the door and unscrew glass cover inside the drum.
- Replace faulty bulb with a new one and screw glass cover back on.
- Replacement bulb: 15W, 220/240 V, E14, suitable up to 300°C.

AFTER-SALES SERVICE

Before contacting After-Sales Service

1. Try to solve the problem (see "Trouble-shooting guide").
2. Restart the programme to see if the fault is repeated.

If after the above checks your dryer does not work properly, get in touch with the nearest After-Sales Service Centre.

Please give:

- a short description of the fault.
- the exact type and model of the dryer.
- the service number visible on the right when door is open.

SERVICE 0000 000 00000



- Your correct address and telephone number.

